

Safety & Warranty information

DURA SLATE

DURABLE WI-FI TABLET

by  KYOCERA

Important Safety Information

This section contains important operational and safety information that will help you safely use your tablet. Failure to read and follow the information provided in this section may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your tablet properly and maintaining safe, satisfactory service.

- Do not expose your tablet to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your tablet is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your tablet not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your tablet, only Kyocera-authorized personnel should service your tablet and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Tablet

Using Your Tablet While Driving

Operation while driving is dangerous. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your tablet safely and efficiently, always follow any special regulations in a given area. Turn your tablet off in areas where use is forbidden or when it may cause interference or danger.

Medical Devices

If you have a medical device, including an implantable medical device such as a pacemaker or defibrillator, consult your healthcare provider and the device manufacturer's directions before using this tablet.

Persons with implantable medical devices:

- Should always keep your tablet more than six (6) inches from the implantable medical device when the tablet is turned ON.
- Should turn OFF the tablet immediately if you have any reason to suspect that interference is taking place.

Using Your Tablet Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from tablets may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if the equipment is adequately shielded from external RF signals.

Consult the manufacturer of any personal medical devices, such as pacemakers, defibrillator, and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: When using the tablet in and near healthcare facilities, always determine the facility's policy concerning wireless device usage and request permission before using the tablet near medical equipment.

Using Your Tablet On Airplanes

On airplanes, follow applicable airline regulations and always follow the flight crew's instructions concerning the use of your tablet.

Turning Off Your Tablet in Dangerous Areas

To avoid interfering with blasting operations, turn your tablet off when in a blasting area or in other areas with signs indicating two-way radios should be turned off.

Turn your tablet off when you're in any area that has a potentially explosive atmosphere. Although it's rare, connecting or disconnecting accessories to your tablet could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations
- Below deck on boats
- Fuel or chemical transfer or storage facilities
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders
- Any other area with a potentially explosive atmosphere where you would normally be advised to turn off your vehicle's engine

Note: Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your tablet or accessories.

Safe Battery Use

Caution: Damage to the battery in this tablet presents a risk of fire or chemical burn. Do not crush, smash, or puncture the tablet. Do not expose to temperatures above 60° C/140° F or incinerate.

Restricting Children's Access to Your Tablet

Your tablet is not a toy. Do not allow children to use the tablet without adult supervision.

Waterproof Capability

Your tablet is waterproof and meets IPX5 and IPX8 standards. Exposing your tablet to water outside these limits or not following the precautions can result in water damage.

To ensure that your tablet maintains waterproof capability, the following precautions must be observed.

- Do not use the product underwater.
- Make sure the microSD card tray cover is properly seated, with no foreign objects obstructing the seals.
- Never open/close the microSD card tray when your hands or the product is/are wet.
- Do not let the product become submerged in or be exposed to liquids other than water.
- Do not expose your tablet to water heated in excess of 104° F (40° C).
- Do not use the USB port for data transmission, charging, etc. until the tablet is completely dry.
- Do not connect the DC plug to the DC In for charging until the tablet is completely dry.
- Do not plug an accessory into Headset In until the tablet is completely dry.

If your tablet gets wet:

After becoming wet, drain water and wipe the product with a dry, clean cloth.

Water in the tablet's open microphone and speaker ports may affect outbound audio quality and speaker performance. These are temporary conditions and will subside once the tablet is dry.

- Do not open the microSD card tray cover as this may allow water to get inside the sealed portion of the tablet.
- Dry your tablet with a clean cloth before charging.

Caring for the Battery

Note: The battery cannot be removed from the tablet. For replacing or disposing the battery, contact a KYOCERA authorized service center.

Your tablet contains a lithium ion (Li-Ion) battery. The guidelines listed below help you get the most out of your battery's performance.

Charging

- If your tablet is wet, dry it with a clean cloth before charging.
- Do not touch the AC adapter, the charging cable, the USB port, or the DC In with wet hands. Doing so may cause electric shock, injury, or product failure.
- Do not charge your tablet in a wet or damp place, such as in a bathroom or near a kitchen sink.
- Do not charge your tablet in direct sun light.
- Only charge the battery using the AC Adapter provided with your tablet. Use of any other device or cable may present a risk of fire, explosion, leakage, or other hazard.

- In order to avoid damage, charge the battery only in temperatures that range from 37° F to 113° F (3° C to 45° C).
- Only use the AC adapter indoors in a dry environment and avoid direct sunlight.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing. The battery cannot be removed from the tablet. Contact a KYOCERA authorized service center for replacing the battery.

Common Causes of Battery Drain

To make your battery last longer, adjust applicable settings and avoid high-drain activities including:

- Playing games or using the Web
- Keeping backlighting on
- Wi-Fi is turned on when Wi-Fi is not being used
- Using data cables or accessories
- High volume settings
- Repeating sound, vibration, or lighted alerts

Storing

Don't store the tablet in high temperature areas for long periods of time. It's best to follow these storage rules:

- Less than one month:
-4° F to 140° F (-20° C to 60° C)
- More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-ion) Battery Installed in Your Tablet

The battery cannot be removed from the tablet. For safe disposal options of your Li-ion battery, contact your nearest KYOCERA authorized service center.

Radio Frequency (RF) Energy

Knowing Radio Frequency Safety

The design of your tablet complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers, and physicians from universities, government health agencies, and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted a hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

Accessories used with this tablet for body worn operations must not contain any metallic components. Body worn accessories that contain metallic components may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, visit the FCC website at <http://www.fcc.gov>.

Specific Absorption Rates (SAR) for Wireless Devices

The SAR value corresponds to the relative amount of RF energy absorbed into the head, body, or extremities of a user of a wireless device.

The SAR value of a device is the result of an extensive testing, measuring, and calculation process. It does not represent how much RF the device emits. All devices are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a device can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, device design, and other factors. What is important to remember is that each device meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All devices must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model devices do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of your device are:

Body: 1.19 W/kg

In the US, the SAR limit for mobile devices used by the public is 1.6 watts/kg (W/kg) averaged over 1 gram of tissue for the body or head.

Devices may have different versions and more than one value. Changes in design or components may occur over time and some changes could affect SAR values. More information on the device's SAR can be found on the following FCC website: <http://www.fcc.gov/oet/ea/>.

FCC Radio Frequency Emission

This tablet meets the FCC Radio Frequency Emission Guidelines.

FCC ID: V65KC-T304C

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antennas.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

Model: KC-T304C

The model number and FCC ID number are printed on a label on the back of the tablet.

This will be helpful if you need to contact us about your tablet in the future.

U.S. Contact Information

Kyocera International, Inc.

8611 Balboa Avenue

San Diego, CA 92123

<http://www.kyoceramobile.com/contact/>

Important: Carefully read our End User License Agreement at our website

<http://www.kyoceramobile.com/support/phone/> before using or otherwise accessing the software or services provided with your Kyocera device.

Manufacturer's Warranty

Kyocera International, Inc. ("KYOCERA") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date you took delivery of the Product, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product.

This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality, and which will include the KYOCERA standard default software) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period based on the delivery date to you ("Proof of Purchase and Delivery"). After the one year warranty period, you must pay all shipping, parts, and labor charges. This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained, or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically

incompatible or Products used with software, accessories, goods, or ancillary or peripheral equipment not supplied or expressly authorized by KYOCERA for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water (except for Product certified for protection against water; see the Kyocera product website for details on your Product), or excessive moisture or dampness, or extreme changes in climate or temperature; (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, setup, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God, or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); (xi) third party software or applications, data and equipment not originally supplied with the Product; (xii) any Product in which the software has not been updated to the current version; (xiii) any Product in which the operating system has been unlocked (allowing installation of a third party operating system); or (xiv) any Products which have been opened, repaired, modified, or altered by anyone other than KYOCERA or a KYOCERA authorized service center, (xv) Product customization and configuration by KYOCERA as a part of service. Before returning any Product for service, be sure to back up data and remove any confidential, proprietary, or personal information from the Product. KYOCERA is not responsible for damage to or loss of any software, applications, data, setting, customization, configuration or removable storage media.

USE ONLY APPROVED ACCESSORIES WITH KYOCERA TABLETS. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL

INVALIDATE THE TABLET WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE TABLET.

KYOCERA, ITS PARENT COMPANY AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS".

KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. For warranty service information, please call the following telephone number from anywhere in the continental United States: 1-800-349-4478.

© 2023 Kyocera Corporation. All rights reserved.
KYOCERA is a registered trademark of Kyocera Corporation.
All other trademarks are the property of their respective
owners.